




Cat. 1

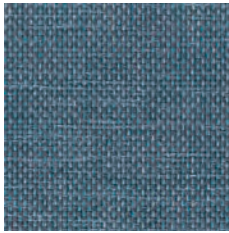


AD6

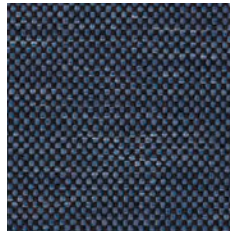


AD9

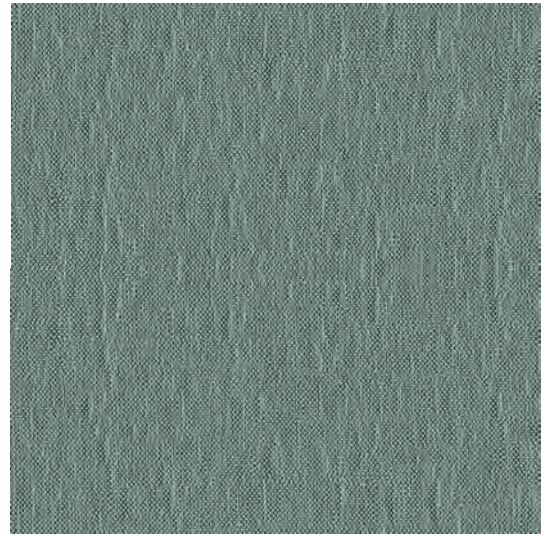


AI2

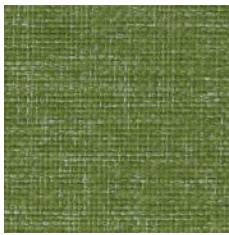


AI8

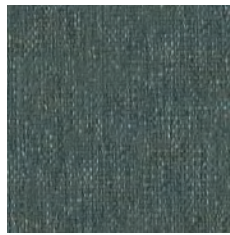


AI1

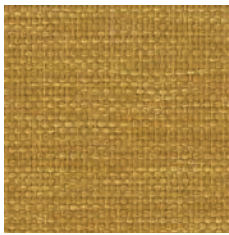


AD7

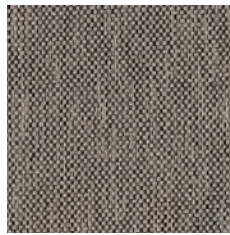

AI3

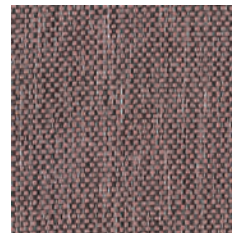


AI4

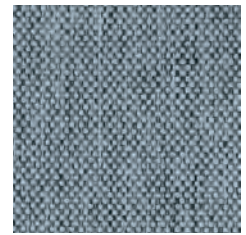


AI6




AI5

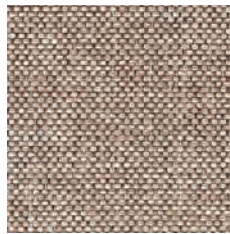

AD8

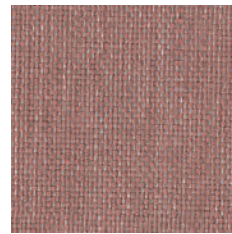


AI0

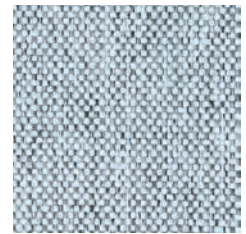


AI7




AD0

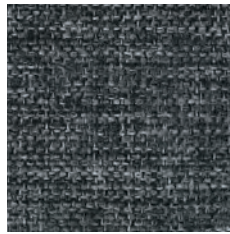

AD1

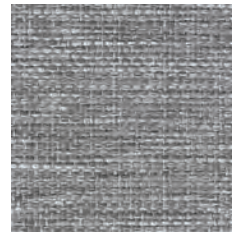


AD2

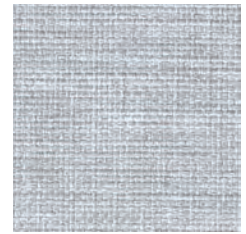


AD3


Cat. 1

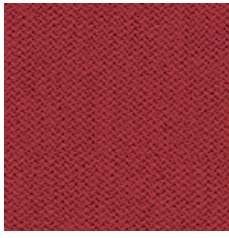


* CSE28 C28

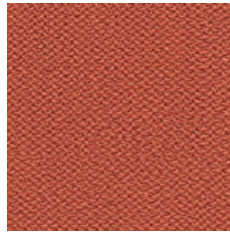


* CSE29 C29

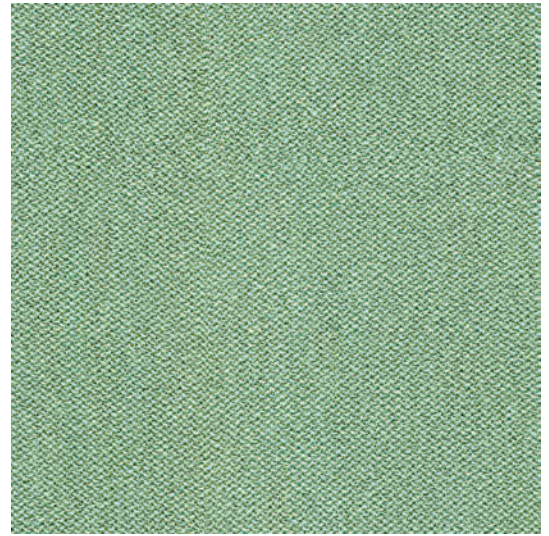


* CSE36 C36

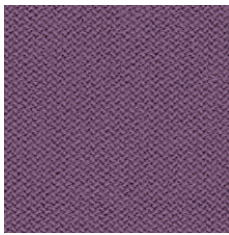


* CSE09 C09

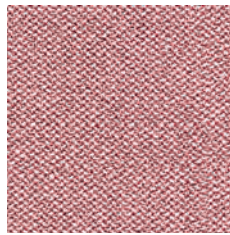

* CSE24 C24

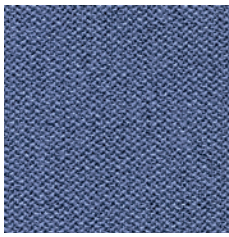


* CSE42 C42

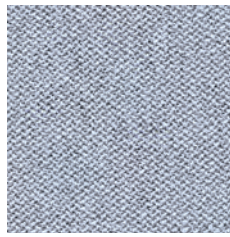


* CSE39 C39




* CSE03 C03

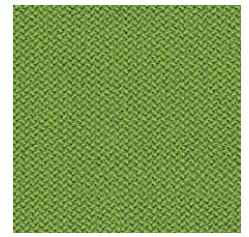

* CSE16 C16

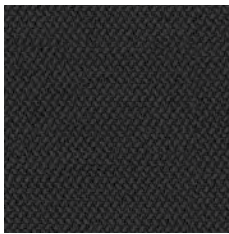


* CSE14 C14

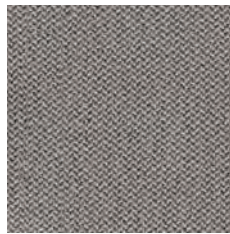


* CSE02 C02



* CSE34 C34

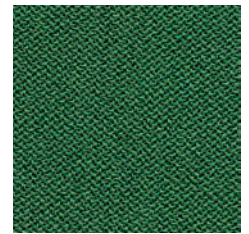

* CSE35 C35

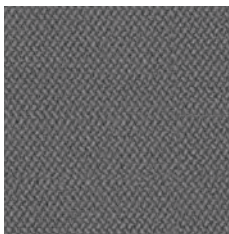


* CSE13 C13



* CSE21 C21




* CSE11 C11

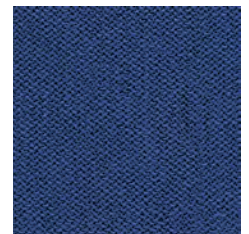


* CSE40 C40


Cat. 1

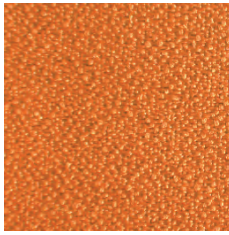


GE3

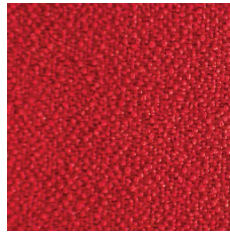


GF5

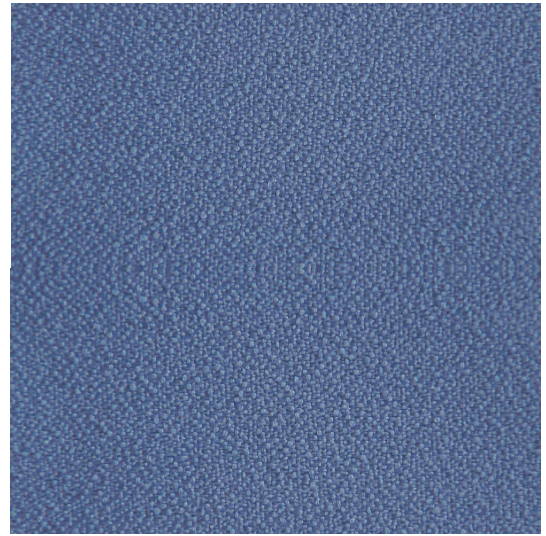


GF6

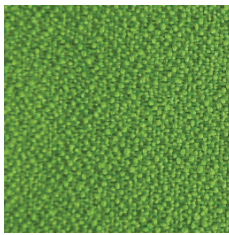


GE8

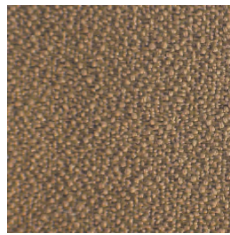


GE7

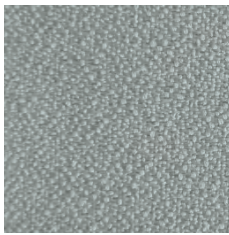


GE2

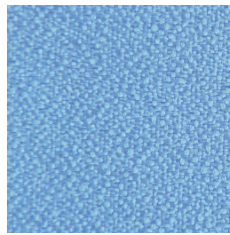


GE6

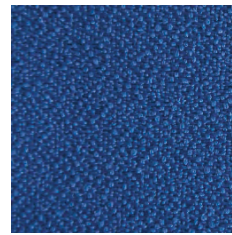


GE4

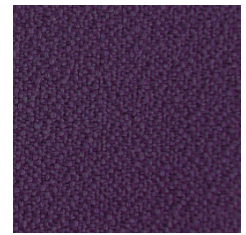

GE5

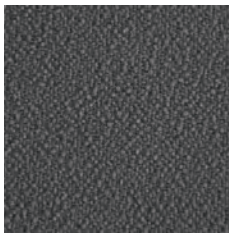


GE9

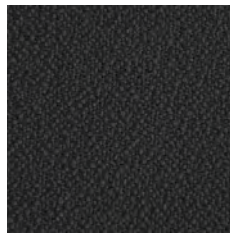


GE1


Cat. 2

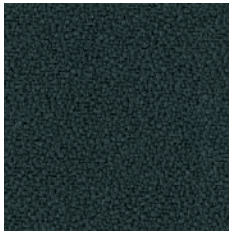

* YB009 YE1

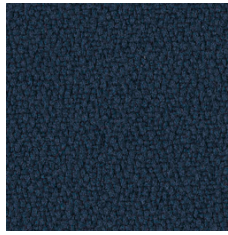


* YB026 YE6

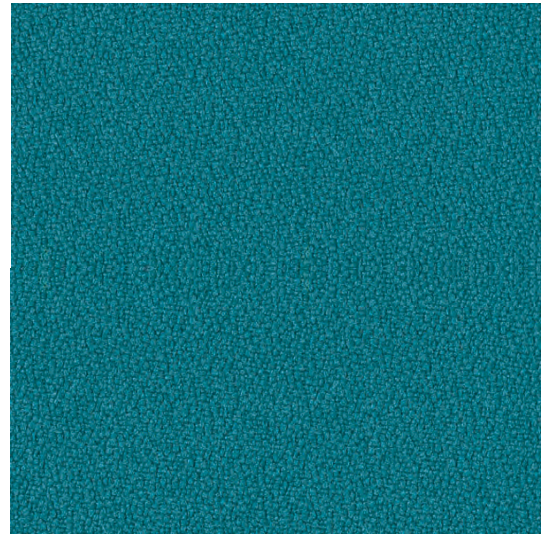

* YB011 YH3




* YB046 YF9

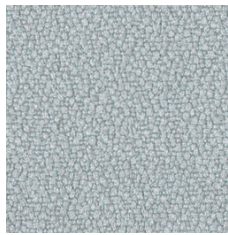


* YB094 YE2



* YB093 YF0

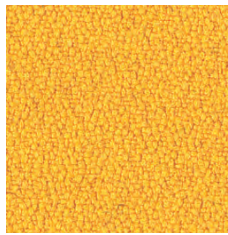

* YB088 YH7

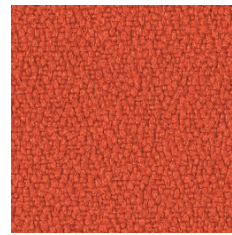


* YB087 YE7



* YB105 YH5


Cat. 2

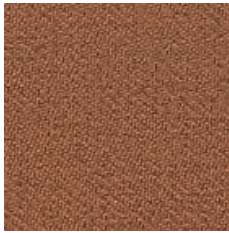

*1/52 TC8




*1/38 TC4

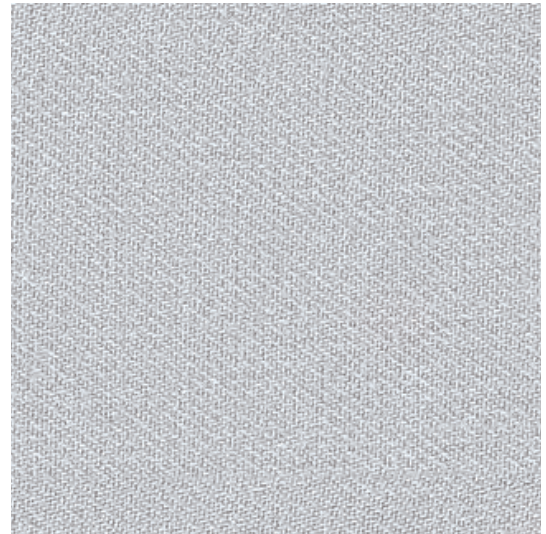


*1/37 TC3




*1/55 TD3

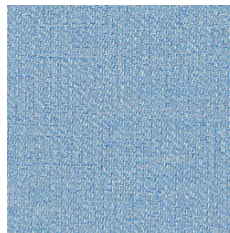


*1/56 TD2

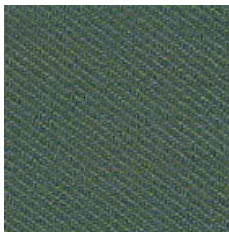

*1/51 TD1

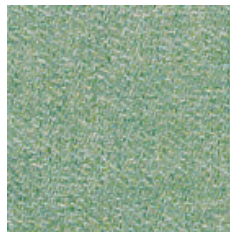


*1/54 TC9

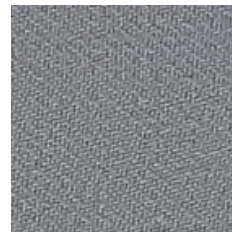

*1/6 TC2




*1/50 TC1

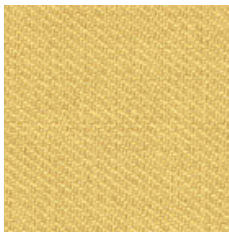


*1/39 TC6



*1/2 TC5

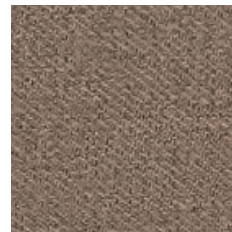


*1/49 TC7

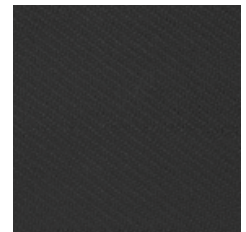

*1/53 TD4


Cat. 2

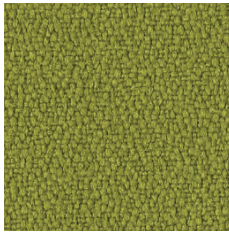


* YS077 Y40




* YS108 Y87

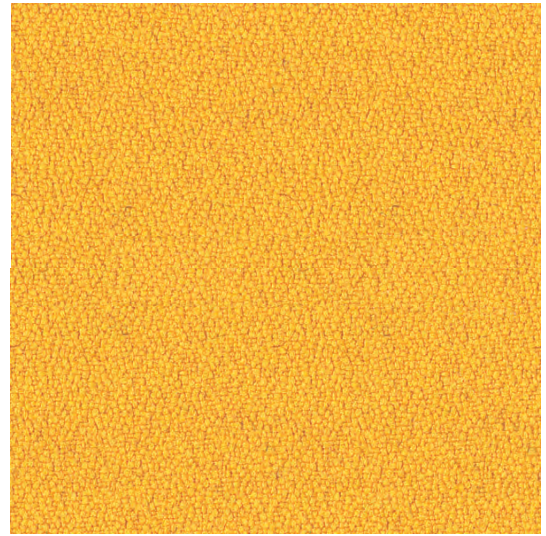


* YS072 Y38

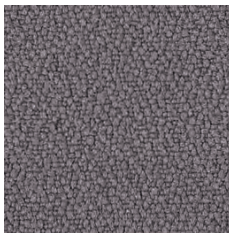


* YS081 Y42

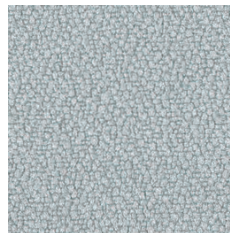


* YS094 Y52

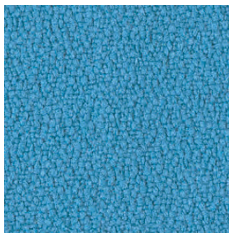

* YS073 Y94

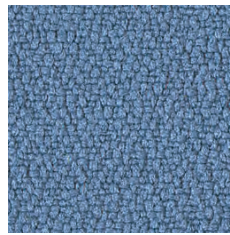

* YS004 Y51

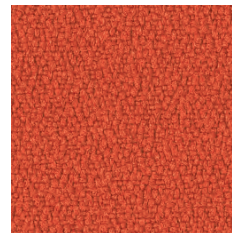

* YS076 Y47




* YS105 Y65




* YS171 Y58



* YS026 Y46

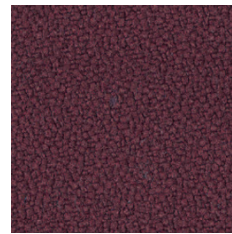


* YS030 Y49

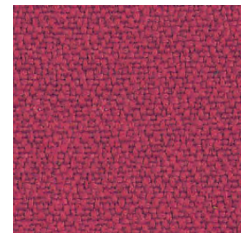


* YS101 Y57



* YS145 Y48

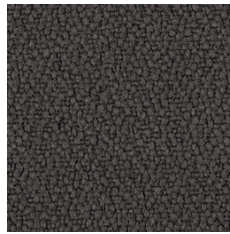


* YS046 Y59

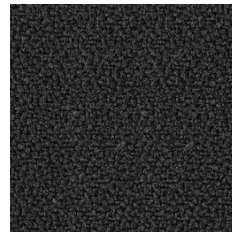


* YS009 Y41

Step | Step Melange


Cat. 2 | Cat.3

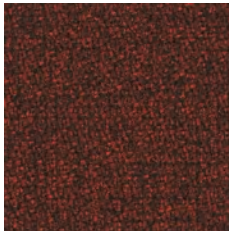


*63075 L24

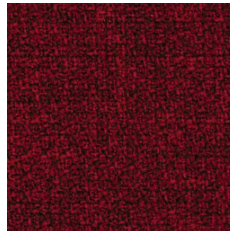


*64013 L18

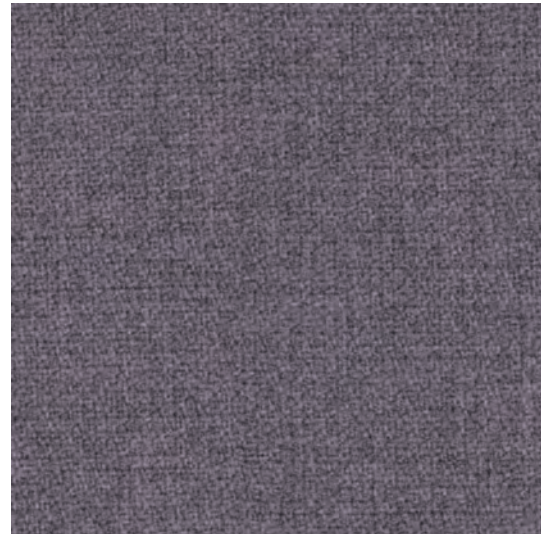


*65093 LY2

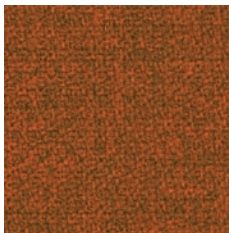


*63082 L10

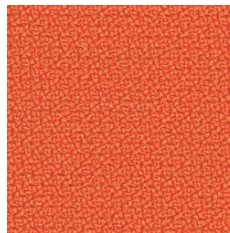


*63082 L11

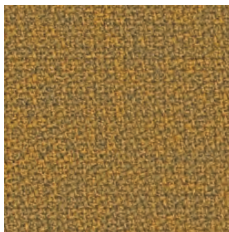


*62057 L16

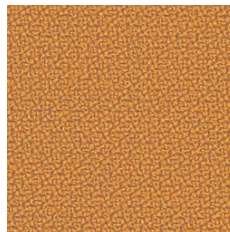

*62057 L17

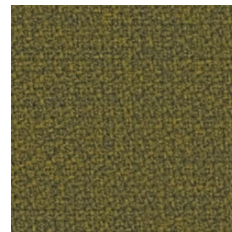


*68119 L08

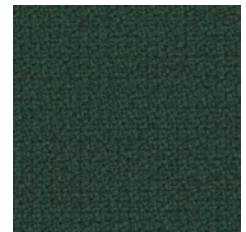


*68161 L26




*61104 L70

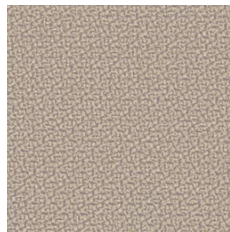


*61149 L15

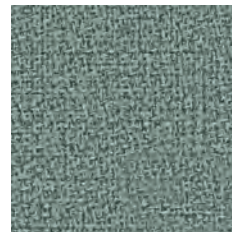


*68118 L50

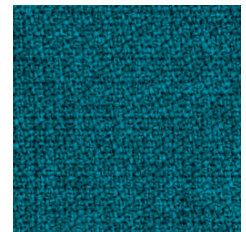


*67007 L02

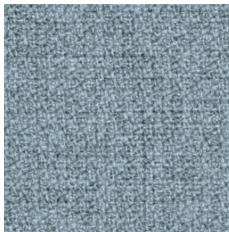


*67004 L06

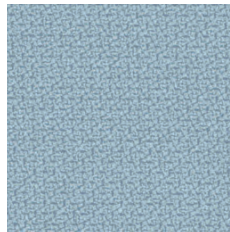

*67004 L07

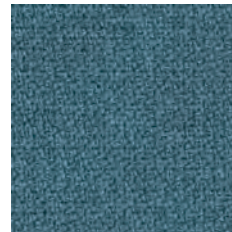


*67072 L28

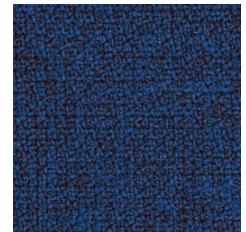


*66149 L04




*60011 L34

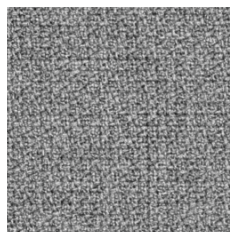

*60004 L12

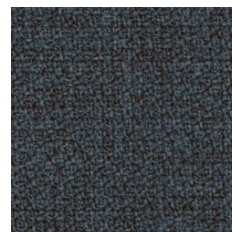


*66019 L20

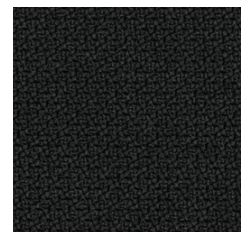


*60999 L01


Cat.3

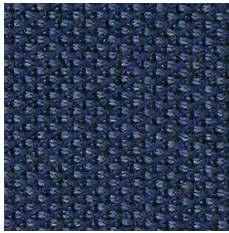


*2501 TA5

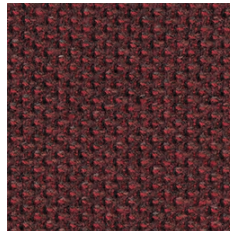


*2801 TB5

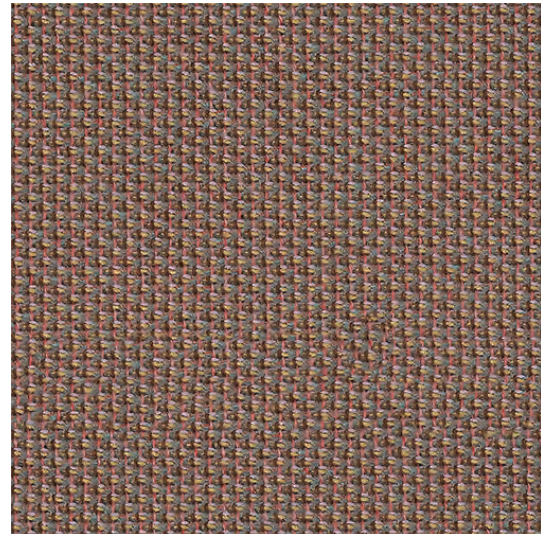


*1201 LN9

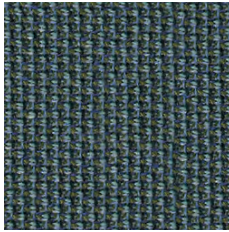


*2601 TA7

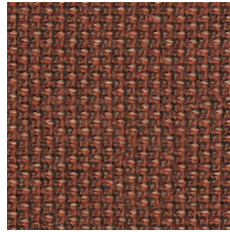

*2201 TB4

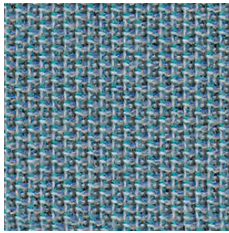

*2401 TA4

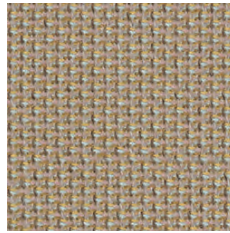


*1102 TB2




*2301 TB1




*2502 TA6

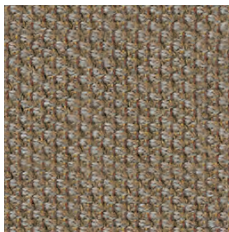


*2001 TB3

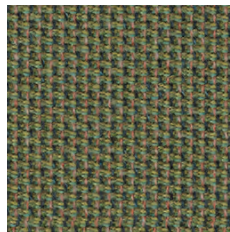


*1701 LS2

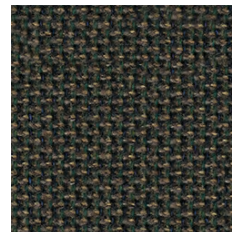


*1302 TA9

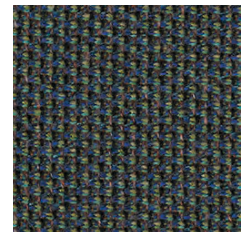


*1803 TA8

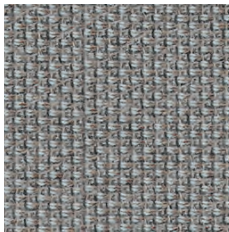

*1901 TA3

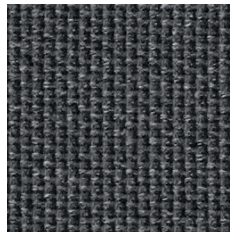

*2901 TA2

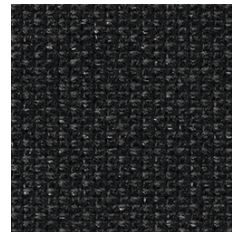

*3101 TA1




*1501 TB6


Cat. 3




* LDS84 S84

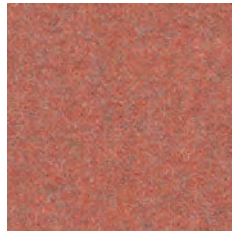

* LDS73 S73

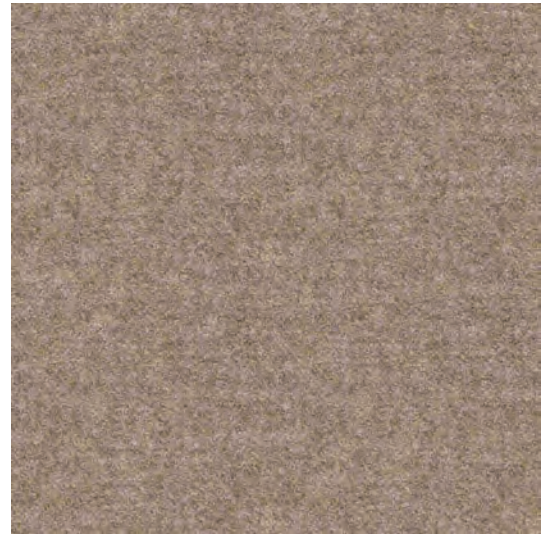

* LDS32 S32

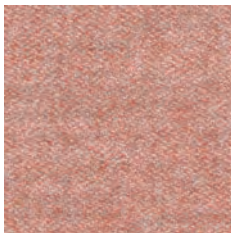

* LDS74 S74




* LDS37 S37




* LDS45 S45



* LDS49 S49

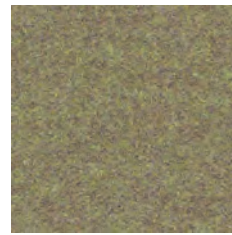


* LDS48 S48

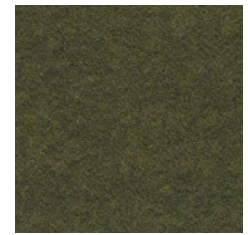


* LDS42 S42



* LDS46 S46

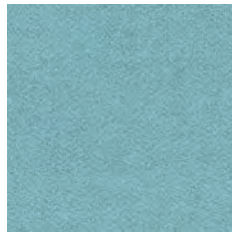

* LDS55 S55

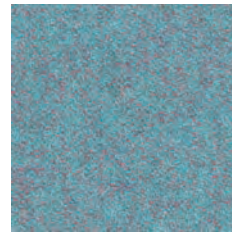


* LDS56 S56




* LDS59 S59




* LDS08 S08

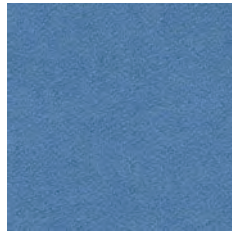


* LDS63 S63

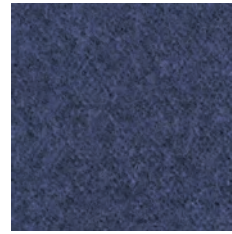

* LDS62 S62

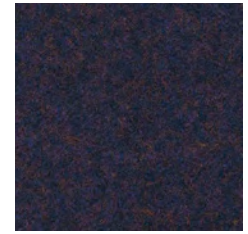


* LDS61 S61

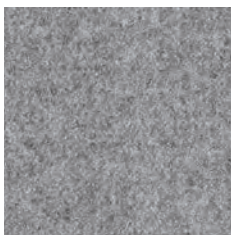


* LDP16 S16



* LDS17 S17

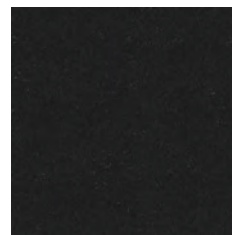

* LDS27 S27

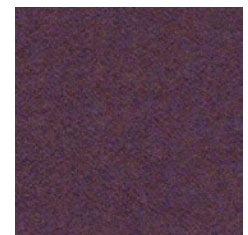

* LDS70 S70


Cat. 3



*0512 GP3 | GC3



*0540 GU4 | GZ4

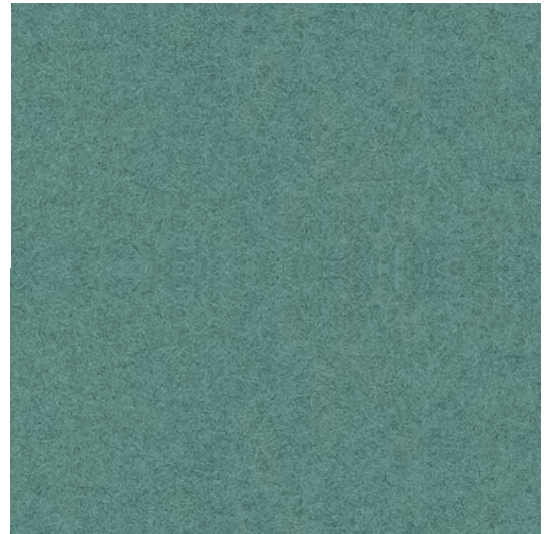

*0537 GT6 | GS6



*0513 GU3 | GZ3



*0570 GT4 | GS4




*0535 GT5 | GS5



*0527 GT3 | GS3



*0549 GP1 | GC1

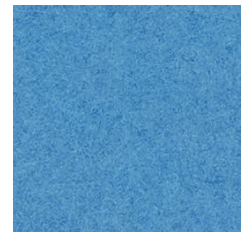


*0538 GT1 | GS1



*0530 GU5 | GZ5



*0597 GT0 | GS0

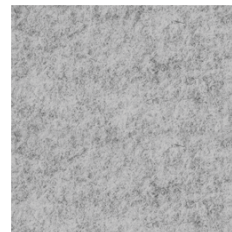


*0556 GT8 | GS8




*0548 GT9 | GS9




*0511 GP5 | GC5

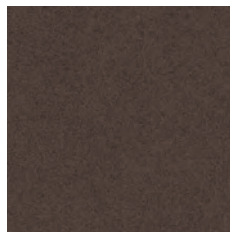


*0560 GU8 | GZ8

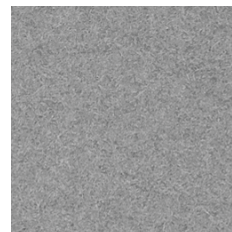


*02130 GT2 | GS2

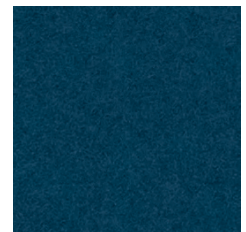


*0516 GU6 | GZ6

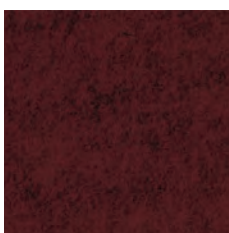


*0510 GT7 | GS7

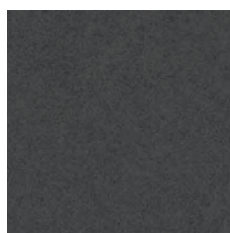

*02128 GU9 | GZ9

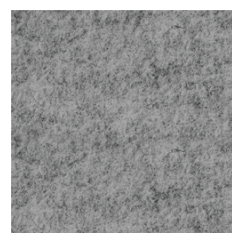


*0506 GU2 | GZ2

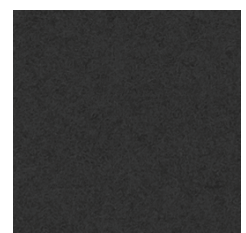

*0599 GU1 | GZ1

Valencia C5

Cat. 3

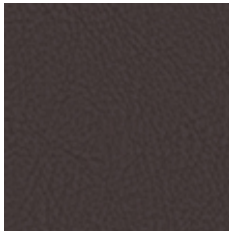

*238-0020 DU1



*238-5069 DU2



*238-0035 DJ2




*238-2074 DU5



*238-5001 DU3



*238-3067 DU4

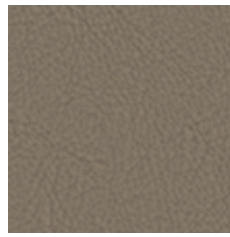


*238-0034 DT7




*238-2115 DT9




*238-4003 DT3

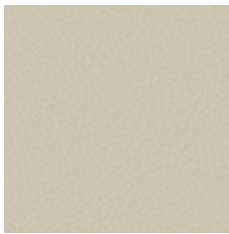

*238-1048 DS6

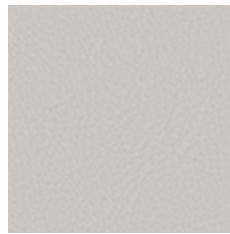

*238-4040 DT5

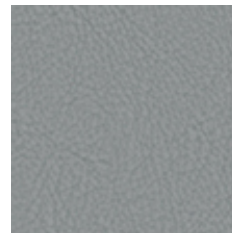

*238-4045 DT4



*238-9035 DT2

Cat. 2



D16




D17



D21



D15

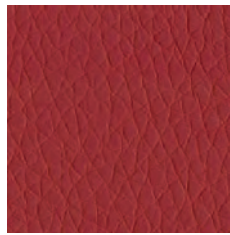

D08



D18



D19



D20




D11

DNN



Cat. 4

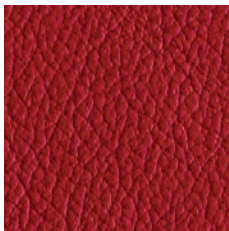

D85




D97



D86



D88

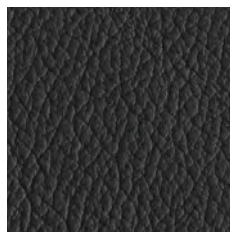

D81